


Safe Jack

HI-LIFT JACK SECURE LIFTER INSTRUCTION MANUAL

PART NO. 14020

SUITABLE FOR HI-LIFT / FARM JACKS

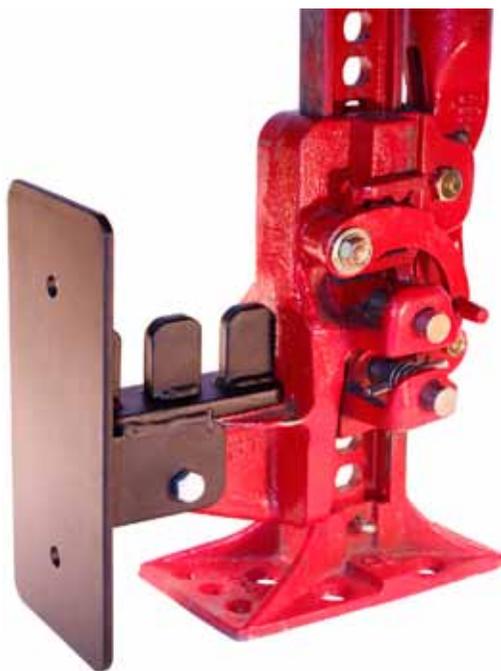

**TO PREVENT SERIOUS INJURY, READ AND UNDERSTAND
ALL WARNINGS AND INSTRUCTIONS BEFORE USE**



The warnings, precautions, and instructions discussed in this manual cannot cover all possible conditions and situations that may occur. The operator must understand that common sense and caution are factors, which cannot be built into this product, but must be supplied by the operator.

WARNING SUMMARY

Do not allow anyone in or near the vehicle while using the jack. Sudden movement and weight shift can result in instability. Keep all personnel a safe distance away from the vehicle.

Do not attempt to lift the vehicle on a side or longitudinal slope. The vehicle can slide or roll causing severe injury or death.

Before lifting, place the vehicle's transmission in 'PARK' for automatic transmissions and Low Gear (1st gear) for manual transmissions. Set the vehicle's emergency brake. Block the wheel diagonal to the wheel that is being lifted, with wheel chocks.

Always use safety equipment when using this product, such as safety impact goggles, steel-toed boots and heavy duty work gloves.

Never allow anyone underneath any parts of the vehicle during jack operation at any time when the vehicle weight is being supported by the jack.

Always keep hands, fingers, and feet away from all moving parts of the Jack when applying or releasing a load. Remain clear of the vehicle during raising or lowering operations.

Do not attempt lifting a load with the jack that exceeds the load rating of the jack. Doing so could cause serious personal injury and/or property damage.

Never modify the 14020 in an attempt to use it for a purpose it was not designed for.

Check jack for damage before using. Check for loose screws, misalignment or binding of moving parts, loose mounting, cracked or broken parts. Replace if damaged.

The 14020 Safe Jack Secure Lifter is designed to be used with standard Hi-lift or Farm style jacks only.

Position the jack to lift only a single wheel station at a time. Do not use multiple jacks or lifting means to raise more than one wheel at a time.

Jack service must be performed only by qualified personnel. Service performed by unqualified personnel could result in a risk of injury.

Do not use the jack to support a vehicle over extended periods of time. The duration of the lifting task should be kept to a minimum. Always use jack stands to support a vehicle over an extended period of time.

FAILURE TO FOLLOW THESE INSTRUCTIONS CAN RESULT IN SEVERE INJURY OR DEATH TO PERSONNEL.

SECURE LIFTER KIT CONTENTS

Unpack the box and ensure that all parts are included:

- ① 1 x Secure Lifter Nose Piece
- ② 1 x Quick Release Pin

Note: Polyester Sling (Part No. 14026),
6 ft Chain (Part No. 14025),
Hi-Lift Jack Base Plate Insert (Part No. 14011)
and Universal Stabiliser Base Plate (Part No. 14000)
may be purchased separately.

If you are missing any parts please call (03) 9761 1110 immediately.



This Kit is designed to attach to the jack type commonly referred to as a Hi-Lift Jack®, Farm Jack, Lift Jack, Jackall Jack®, Shepherds Jack, etc. These jacks have been manufactured by numerous manufacturers.

NOTE: Although this style of jack is universal, we cannot guarantee that every jack will attach to the Safe Jack™ Secure Lifter. If your jack does not conform to the design limits of the kit, do not attempt to use it or modify the tool or the jack.

INSTALLATION INSTRUCTIONS

The Secure Lifter adds stability and more secure attachment points to typical lift jacks, commonly referred to as a Hi-Lift or Farm Jacks. The nose piece of the Secure Lifter is placed against the load to be lifted, and chains or straps are attached. As the jack is raised, the chains pull tight and the nose piece is pulled securely against the load. The nose piece will keep the jack essentially parallel to the load being lifted.



1. Slide the Safe Jack Secure Lifter over the lifting nose or large runner of a Hi-lift or Farm jack.



2. Align the holes in the Secure Lifter with the hole in the lifting nose or large runner of the jack.



3. Install Quick Release Pin through the holes to securely attach the Secure Lifter to the jack. It is fine if it wobbles a bit.

OPERATING INSTRUCTIONS

The following instructions are a general guideline for using the Safe Jack Secure Lifter. They do not replace the operation or service manual for the jack you are using.

**IMPORTANT: If using to raise a wheel on a vehicle,
Chock Wheel Diagonal to tyre being raised.**

LIFTING A VEHICLE TYRE



To use the Secure Lifter, place the jack with the abutment plate against the load you are going to lift. If you are going to lift a wheel using the attachment, the abutment plate should rest against the wheel rim or tyre. Chains or straps can be added to secure the load to the Safe Jack Secure Lifter.

A short lift strap and chain makes it simple to pick up alloy wheels of any size without the risk of damage to the wheel or rim.



LIFTING CONTAINERS, LARGE VEHICLES, POSTS



Lifting a shipping container or similar can be accomplished by placing the abutment plate against a solid portion of the wall, and then attaching chains to the load.

The chains should be applied so that the load is pulling from both sides of the Secure Lifter.

OPERATING INSTRUCTIONS cont...

As long as there is a solid point where you can attach chains, almost any object can be lifted (such as this tractor wheel), as long as it is within your jack's capabilities (See Jack Instruction Manual for load limits).



Pulling Posts with the Secure Lifter is simple. Place the abutment plate against the post. Attach one end of a chain to a chain slot. Wrap the chain around the post several times and attach to the chain slot. Raise the jack. The chain should tighten around the post and it should come out easily.

Lifting a vehicle by the frame, rock rail or bumper, can be accomplished by placing the abutment plate against the bumper or rock rail at the frame attach point.



Drape the chain over the top of the frame and bring each end up and into the chain slots. This will hold the jack securely to the bumper or rock rail and prevent it from sliding to the side.



INSPECTION & MAINTENANCE

No maintenance should be needed on the Safe Jack Secure Lifter Kit, with the exception of inspecting the kit for damage or wear, and wiping debris from the kit after use.

If any parts are missing or broken: Call Pro Quip on (03) 9761 1110 or email to sales@proquip.com.au.

If any questions arise with any of the procedures outlined in this manual, or safety related questions in using this accessory, please contact Pro Quip on (03) 9761 1110 or email to sales@proquip.com.au.

CAUTION: Maintain labels and name plates on the Safe Jack Secure Lifter Kit and the jack you use with it. These carry important information. If unreadable or missing, contact Pro Quip or the jack manufacturer for a replacement.

WARRANTY TERMS & CONDITIONS

This warranty is given by Pro Quip International.

ABN 39 109 672 326

Address: 14 London Drive, Bayswater Vic 3153

Email: sales@proquip.com.au Ph: (03) 9761 1110

All components are warranted to be free of defects in materials and workmanship and carry a one year parts and labor warranty when used in accordance with the operating instructions and limitations.

Any claim under this warranty must be made within one year of the date of purchase of the product (as marked on the invoice/receipt). This warranty does not cover ordinary wear and tear, abuse, misuse, alterations of products, the use of improper fluids, or damage caused by the consumer.

To make a warranty claim, the consumer must deliver the product (with proof of purchase) at their cost, to the original place of purchase, along with an explanation in writing as to the nature of the claim. A warranty assessment will then be undertaken. If the claim is for a minor failure of the product, and the claim is accepted, Pro Quip International reserves the right to repair or replace it at its discretion. If the claim is for a major failure of the product, and the claim is accepted, the consumer will be entitled to a replacement or a refund as well as compensation for any other reasonably foreseeable loss or damage.

This warranty is provided in addition to other rights and remedies you have under Law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Determination of the authenticity of a warranty claim will be made only by Pro Quip International.

OTHER SAFE JACK HI-LIFT PRODUCTS



SAFE JACK
6 foot
Chain

PART NO. 14025



SAFE JACK
POLYESTER
SLING

PART NO. 14026



SAFE JACK
UNIVERSAL
BASE PLATE

PART NO. 14000



SAFE JACK
STABILISER
LEGS

PART NO. 14030

SAFE JACK - BOTTLE JACK PRODUCTS



SAFE JACK
6 TONNE
BOTTLE JACK

PART NO. 14600



SAFE JACK
BOTTLE JACK
RECOVERY
KIT

PART NO. 14110



SAFE JACK
UNIVERSAL
BASE PLATE

PART NO. 14000



SAFE JACK
BOTTLE JACK
BASE PLATE
INSERT

PART NO. 14121



Scan the QR Code
to see the Secure
Lifter in Action.

EXCLUSIVE AUSTRALIAN DISTRIBUTOR
PROQUIP
VALUE ADDED PRODUCTS

PRO QUIP INTERNATIONAL PQI PTY LTD T/As
14 London Drive (PO Box 852), Bayswater VIC 3153 Australia
phone: (03) 9761 1110 email: sales@proquip.com.au

www.proquip.com.au