


HOW TO REPLACE A FUSE

Inside the Booster

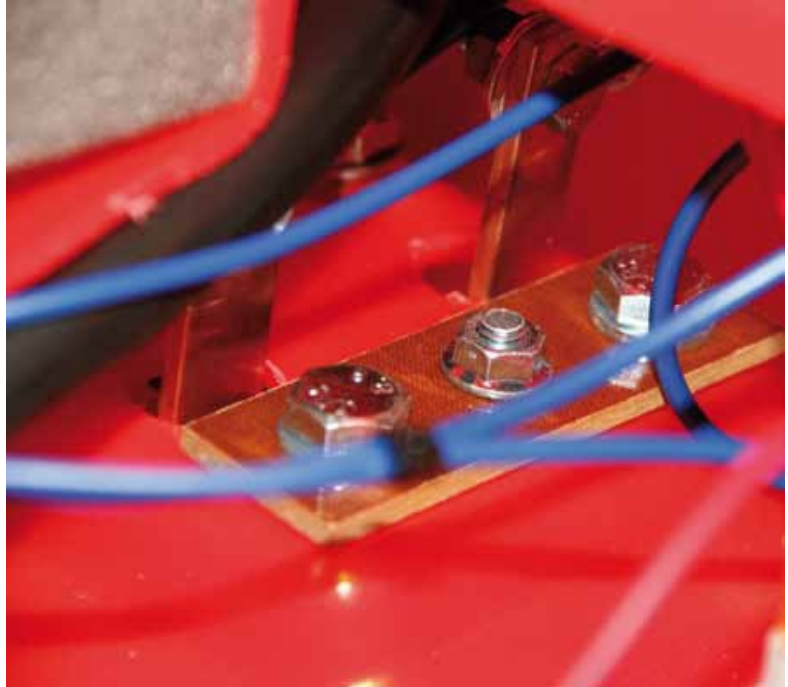

Outside the Booster

