

If the Seal on your Platinum pourer tends to come off when taking the pourer out of the lid, try this:

1. Hold the cap steady with one hand.
2. With the other hand turn the pourer in an anti-clockwise direction while gently pushing up.



3. The pourer should come out quite easily, with the seal intact.



4. If the seal does come off, simply manoeuvre it back onto the rim of the pourer.

Note: The Seal is designed to fit quite tightly in the lid, to prevent leakage.