


## HOW TO REPLACE A FUSE

### Inside the Booster

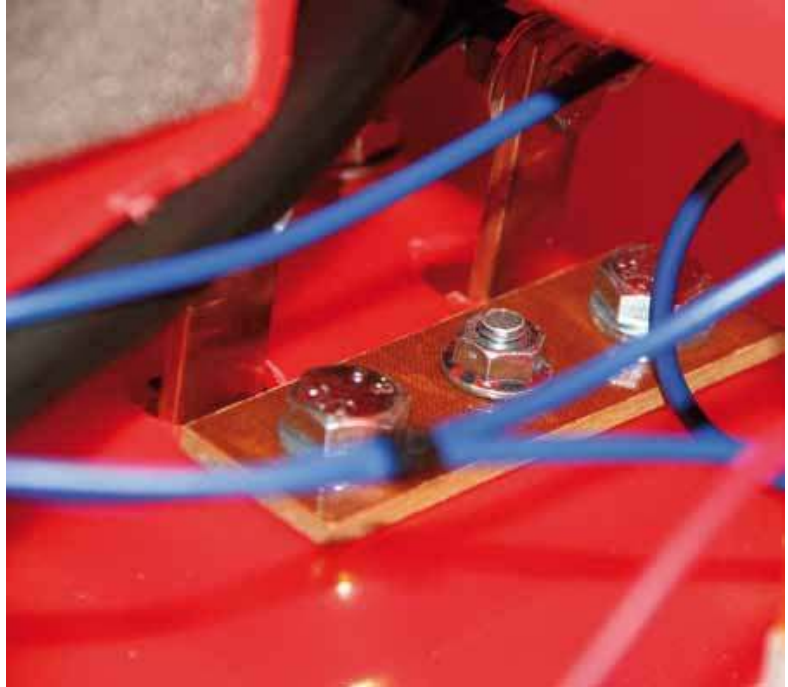

### Outside the Booster

