


PRO QUIP FLOTOOL FUNNEL STAND

Assembly sheet for Part # 10994


INCLUDED WITH THIS PACK:

- 1 x Metal Frame
- 3 x Wire Baskets
- 2 x Clip Strips with hook
(One inside 10711 box)

15 WIRE RINGS
COMPOSED OF:

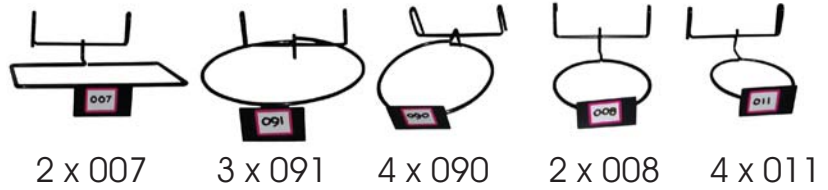

1. Slot feet into base of stand
2. Attach one basket on each side to lowest rung of stand
3. Attach one basket to 4th rung on Side 'A'

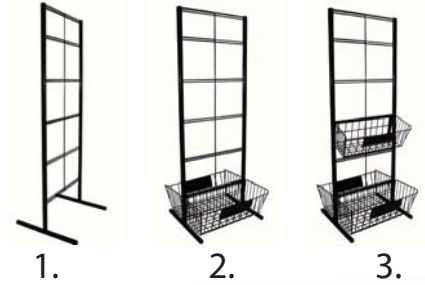

Side 'A'

4. Attach to the top rung (Rung 1) 4 x 011 Wire Rings
5. Attach to the centre of the 3rd rung 1 x 091 Wire Ring
6. Attach to either side of the 3rd rung 1 x 008 Wire Rings (Total: 2)
7. **Insert stock as follows:**
 - a) In Lower Basket, place 6 x 10710
 - b) In Upper Basket, place 6 x 10704
 - c) On 3rd rung, place 12 x 10713 in each ring on either side
 - d) On 3rd rung, place 6 x 10705 in the centre ring
 - e) At top rung, place 6 x 10701 in each wire ring



SIDE 'A'

Side 'B'

8. Attach to the top rung 2 x 090 Wire Rings towards the outside of the frame
9. Attach to the centre of the 2nd rung 1 x 090 Wire Ring
10. Attach to the centre of the 4th rung 1 x 090 Wire Ring
11. Attach to either side of the 4th rung 1 x 007 Wire Rings (Total: 2)
12. Attach to the 5th rung 2 x 091 Wire Rings towards the outside of the frame
13. **Insert stock as follows:**
 - a) In Basket, place 6 x 18FF-1
 - b) On 5th rung, place 6 x 10714 in each ring on either side
 - c) On 4th rung, place 6 x 10709 in each ring on either side
 - d) On 4th rung, place 6 x 18-F12 in the centre ring
 - e) On 2nd rung, place 6 x 18-F12 in the centre ring
 - f) At top rung, place 6 x 10712 in each wire ring
14. Hang Clip strips from hooks, one on each side of the top of the frame
 - a) Attach 6 x 10111/6 to left strip
 - b) Attach 6 x 10711 to right strip



SIDE 'B'

Your Display is now Completed.



Pro Quip International

14 London Drive, Bayswater, Melbourne 3153 Australia

Tel: (03) 9761 1110 Fax: (03) 9761 1565 Email: sales@proquip.com.au